

Operation button

MTT-10 Instruction Manual

1. ZERO/ON button

press quickly:

turn on, the preset value appears.

press and hold:

turn off

2. ABS/PRESET button

press quickly:

change measuring mode between relative mode and absolute mode. The display will be set to zero at relative mode and to preset value at absolute mode.

press and hold:

change to preset mode

Setting of preset value

2.1 press and hold of ABS/PRESET button (> 3 sec), "SET" appears and last digit is flashing, the system starts the preset mode.

2.2 by pressing in/mm button, flashing digit will change from 0 to 9, once you get the value you want, press quickly the ZERO/ON button to select next digit.

2.3 repeat point 2.2 until all digits are set.

2.4 press and hold the ABS/PRESET button to exit the preset mode.

3. in/mm button


press quickly:

change the unit between inch and mm

press and hold:

change the measuring direction

Anzeige u. Bedienungselement Display and Nomenclature

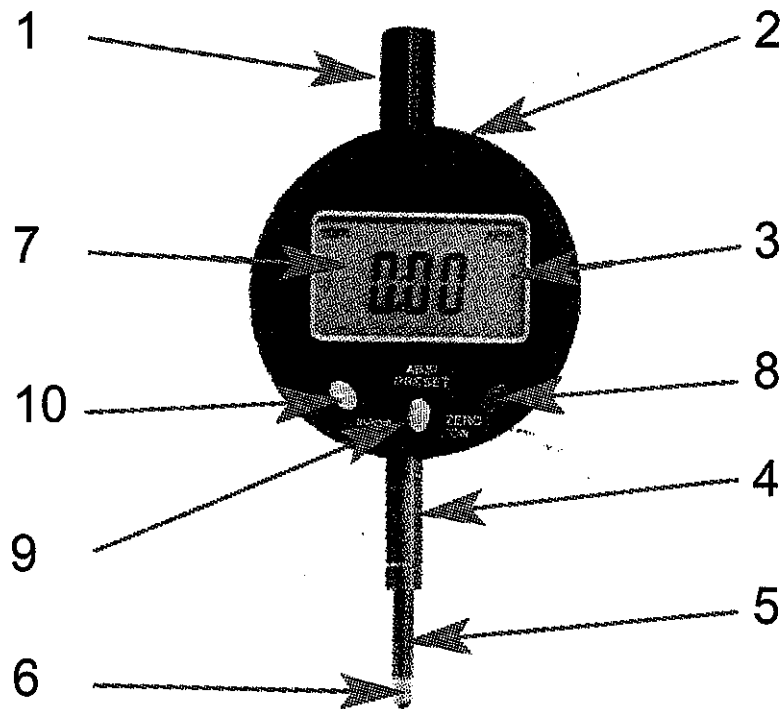

1: Schutzkappe
 2: Batterieabdeckung
 3: Datenausgang
 4: Aufnahme
 5: Messspindel
 6: Messtastkopf
 7: Anzeige
 8: ZERO/ON-Taste
 9: ABS/PRESET-Taste
 10: in/mm-Taste

1: cap
 2: battery cover
 3: output connector
 4: stem shank
 5: spindle
 6: measuring head
 7: display unit
 8: ZERO/ON button
 9: ABS/PRESET button
 10: in/mm button

Messmethode / Measuring mode

1. Preset-Messung
 Messung mit Anfangswert
 2. Absolut-Messung
 3. Relativ-Messung

1. Preset measuring
 Measuring with preset value
 2. Absolute measuring
 3. Incremental measuring